

FLYMASTER 31

Updating firmware



Introduction

As new features or bug fixes get added to the B1 firmware, we will provide constant updates to our users. This document describes the procedure for updating the B1's firmware.

Update procedure

To update the B1 you will need to install the B1's USB driver which is available on our web site, you must be a registered user to access the "downloads" section.

Connect the B1 to your PC and follows windows instructions to install the driver. Once the driver is correctly installed use the following procedure.

- 1- Execute the FlashB1 application.
- 2- Select the B1Firmware.b1b file previously downloaded from the web site.
- 3- Push the "Send" button.
- 4- Hold the "Menu" button on your B1, and insert a toothpick into the reset orifice on just above the usb connector on the B1 in such a way as to reset the B1.
- 5- Release the reset button while keeping the "Menu" button. Once you see a message on the FlashB1 "Erasing memory..." you may release the "Menu" button.
- 6- Wait until you see the message "Complete."